

Linksys PAP2T gateway configuration guide with Netelip service.

This manual explain how to configure phone 1 of your Linksys PAP2T gateway and connect it with netelip service to make and receive calls on your telephone.

Step 1

Register at www.netelip.com Access to your Netelip private area. Go to option "Configure your Linksys PAP2" at the left side of the page.

Step 2

From here, you can know your gateway IP just dialing ****110# on your telephone. You will hear a voiceover that indicates you the IP that you must enter on the corresponding fields.

Mi cuenta	Configura tu adaptador Linksys PAP2
Mis números asociados	Podrás configurar tu adaptador Linksys PAP2 de 2 formas distintas.
E-buzón de voz	Una, descargándote nuestra aplicación de configuración pinchando aqui. Una vez descargada ejecútala y reflena los campos que te solicita la aplicación.
Envio de SMS	Des, desde esta página Web, que solo te permitirá configurar la línea 1 de tu adaptador telefónico siguiendo estos pasos:
Códina promocional	1 Conecta un telèfono amalógico al adaptador de Voz IP.
Compra tu producto	 Esta opción se puede comitri si el equipo no ha sido ya configurado. Para receisar el adaptador a los valores de fabrica, descuelga el teléfono y marca ****73738#. A continuación escuetoras una locución solicitándote que puede la tecta i para confirmar.
Configurar Linesys PAP 2	 Para obtener la dirección IP de tu adaptador, descuelga el teléfono y marca ****1100. Escucharás en Ingles la dirección IP de a tu adaptador.
Modifica tus datos personales	4 Rellena el campo "Dirección IP del adaptador * con los dígitos que has escuchado y haz click en "Aceptar".
Identificador de Ismada	Dirección IP del adaptador: de Voz IP

Step 3

Wait for some seconds to see a previous window that will redirect you to your Linksys panel. Your browser will open a new tab.

o netelip

Voice		Phone Adapter with 2 Ports for Voice Over IP				
	life System S	P Provisioning Reg	onal Line 1 Line 2	User 1 User 2		
	-					
synctoenn fuif or results	CHICP. Host Renet. Current Networks. Internety CHGL Secondary CHG	Enisted UrksysfAF 255.255.255.0 0.604.4 6.84.4 213.236.11.70	Carterit IP, Domen Carters Galeway	192 193 0. 192 198 0.1		
reduct full or mails	Product Name, Software Verbler, MAC Addinos: Guitomeaters	PAP21 3.1.14(L5) 02280009F72 Open	Smiel Number: Handevane Version Client Contribute:	PLOOK125178 0.3.5 Initialed		
System Stat	Ouvertime Research Size Card	39001151137	Elipsed Inte	00000		
	Broadcast Pits Recv	6	Broadcast Bytes	1158		
	Broadcast Pits Designed ATP Packets Sort ATP Packets Sort SP Messages Sent	e e e 2	Racy: Broadward Bytes Oroppiet: RTP Bytes Sart: RTP Dytes Recy: SP Bytes Sert	0 0 1122		

Your gateway line 1 has been configured, so your telephone now is prepared to start making and receiving telephone calls. You can configure line 2 also if you wish.

Enjoy Netelip service!