

## Linksys PAP2T gateway configuration guide of line 2 with Netelip service.

This manual explain how to configure phone 2 of your Linksys PAP2T gateway and connect it with netelip service to make and receive calls.

### Step 1

After connecting router and a second telephone cable in your line2, check lights of phone2 and Ethernet are illuminated.

### Step 2

Obtain your gateway IP address. For that, dial with your telephone \*\*\*\*110#. A voiceover will indicate you the address.

Enter the IP in your browser like this:  
`http://192.168.XXXXX`

Now you can access to your PAP2 to configure Line 2.

### Step 3

Firstly, you will see a previous window that will redirect you to your Linksys panel.



Wait some seconds while your browser open a new tab.



## Step 4

Access to Line 2 and fill out the following fields:

**NAT MAPPING ENABLE: YES**

**NAT KEEP ALIVE: YES**

**SIP PORT: 5061 (in Line 1 must appear 5060 port)**


**PROXY: sip.netelip.com**

**PASSWORD: Your SIP password**

**USER ID: Your SIP user**

Basically, check that fields filled out in line 2 are the same than in line 1.

\*\*If you are configuring an extension of your Hosted PBX, please insert as proxy server: **vpbx.netelip.com**

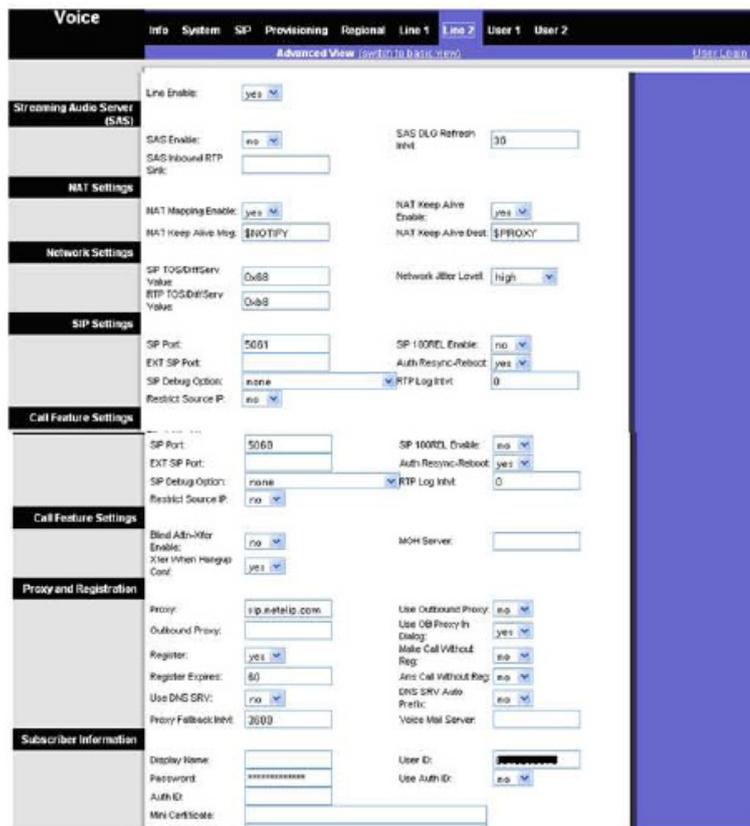

Category	Field	Value
Streaming Audio Server (SAS)	Line Enable	yes
	SAS Enable	no
	SAS Inbound RTP Spk	
NAT Settings	NAT Mapping Enable	yes
	NAT Keep Alive Enable	yes
Network Settings	SP TOG80Serv Value	0x88
	RTP TOG80Serv Value	0x88
SIP Settings	SP Port	5061
	EXT SIP Port	5060
	SP Debug Option	none
	Restrict Source IP	no
Call Feature Settings	SP Port	5060
	EXT SIP Port	5060
	SP Debug Option	none
	Restrict Source IP	no
Proxy and Registration	Proxy	sip.netelip.com
	Outbound Proxy	
Subscriber Information	Display Name	
	Password	XXXXXXXXXX

Your gateway adapter now is ready to start making and receiving calls from Netelip, using a second telephone connected to Phone 2.

Enjoy **netelip** service.