

## Configuration guide for IP telephone Linksys SPA 941

This manual explain how to configure Linksys SPA 941 IP telephone for 2 or 4 lines with Netelip service.



### Step 1

First, obtain your telephone IP address. To get it, just press the "Set up" key we show in the next photo.



Then select "Network" and "Current IP" that will show your telephone IP required to access to configuration.

### Step 2

Enter the IP address obtained in the address bar of your computer browser.

### Step 3

Click the button "admin login" in the upper right to access the configuration.

Info	System	User	Admin Legan) basis I advanced Regreed Dectory Call Hattery

# onetelip

Then click "Ext 1" tab to select the line 1 of your Linksys.

Info System SIP Regional Phone Ext 1 Ext 2 User

### Step 4

You must modify some parameters set by default. These are:

Proxy: *sip.netelip.com* or *vpbx.netelip.com* (in case you are configuring an extension of your vPBX)

User ID and Auth ID: Enter your SIP user

**Password:** Enter your SIP password (These data were sent to you by e-mail when you first registered at www.netelip.com)

Select YES to "NAT mapping enable" and "NAT Keep Alive Enable".

General				
Line Enable:	yes м			
NAT Settings				
NAT Mapping Enable:	(yes M)	NAT Keep Alive Enables	(yes M)	
SIP Settings	-		-	
SIP Ports	5060	SIP Debug Option:	none	
Call Feature Settings				
Message Waiting:	no 😽	Defeuit Ring:	1 1	
Mailbox ID:				
Proxy and Registration				
Proxy:	sip.netelip.com	Register:	yes 💌	
Make Call Without Reg:	no 粥	Register Expires:	3600	
Ans Call Without Reg:	no 🚿			
Subscriber Information				
Dicplay Name:		User ID:	0019293576	
Password:		Use Auth ID:	(yes M)	
Auth ID:	0019293576		-	
Audio Configuration				
Preferred Codec:	G711a 🚿	Use Pref Codec Only:	no 💌	
Silence Supp Enable:	no 💙	DTMF Tx Method:	Auto 😽	

## Step 5

Should you need to configure line 2, click "Ext.2" and repeat the configuration steps mentioned. Please be sure to increase the SIP port on one more, for configuration of each line of your terminal. For example, Ext1 SIP port 5060, Ext2 SIP port 5061.

### Step 6

You can now start receiving and making telephone calls with Netelip service using the best rates.

Enjoy the service.