

Cisco SPA112 gateway configuration guide for Netelip service.



This manual explain how to configure your CISCO SPA112 gateway and connect it with Netelip service to make and receive calls.

Paso 1

Connect the gateway to your router using RJ45 network cable and also plug your analog telephone to the gateway. Check power and Internet lights are on and green coloured.

Step 2

Obtain your gateway IP address. For that, dial on your telephone ****110#. A voiceover will indicate you the IP. Enter the IP in your browser like this: <http://192.168.XXXXX>.

Like this you will access to your SPA112 where you will find this main page:




Enter data:

Username: admin.


Password: admin.

Step 3

Access to Voice section to enter configuration data needed:

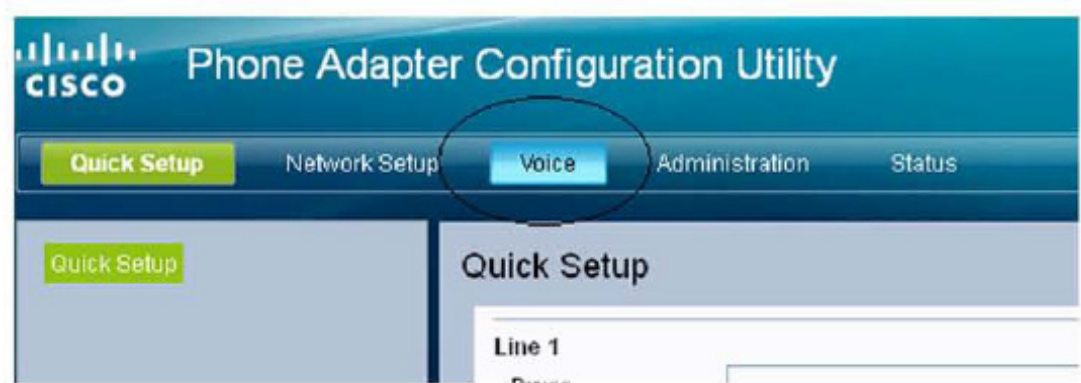

Select line 1 or 2, depending on which one you wish to configure with your **netelip** account or vPBX extension.

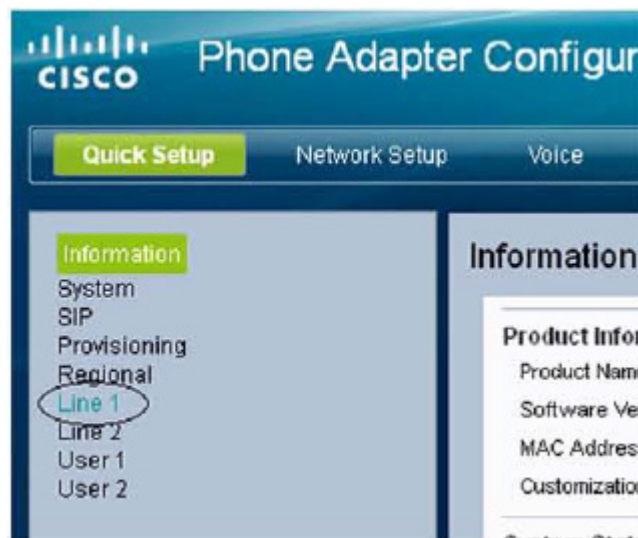

Step 4

Fill out with required data (configuration data are sent by us after registration on our web site or vPBX registration:

NAT MAPPING ENABLE:YES

NAT KEEP ALIVE: YES


PROXY: sip.netelip.com or vpbx.netelip.com

PASSWORD: Your SIP extension

USER ID: Your SIP password

Follow the same steps should you wish to configure the other gateway voice line.

* If you are setting an extension of your PBX, remember to enter a proxy server:
vpbx.netelip.com

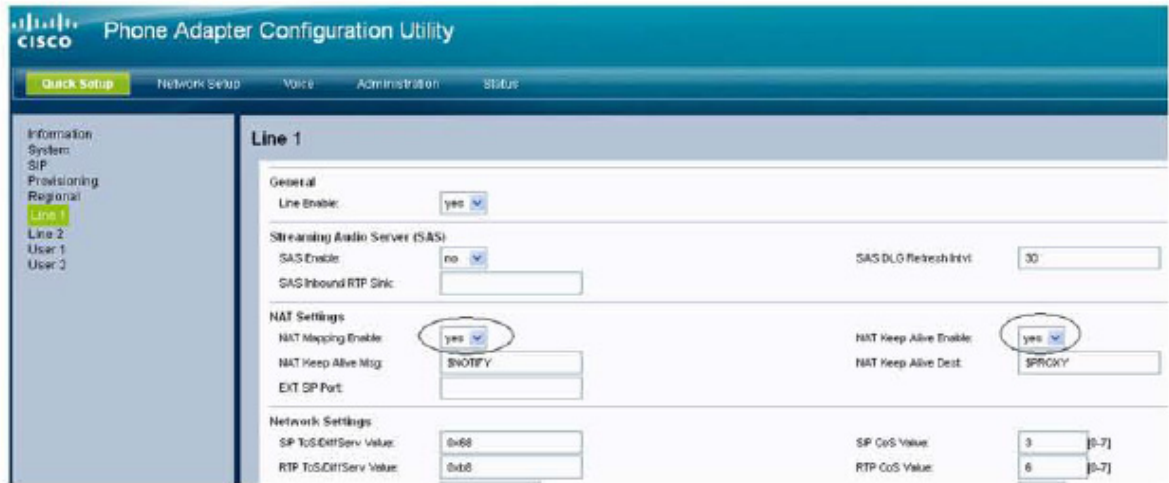

Line 1

General

Line Enable: ☒ yes

Streaming Audio Server (SAS)

SAS Enable: ☐ no

SAS Inbound RTP Sinc:

SAS DLS Refresh Intvl:

NAT Settings

NAT Mapping Enable: ☒ yes

NAT Keep Alive Mng:

EXT SIP Port:

NAT Keep Alive Enable: ☒ yes

NAT Keep Alive Dest:


Network Settings

SP ToS-ExtServ Value:

RTP ToS-ExtServ Value:

SP CoS Value: [0-7]

RTP CoS Value: [0-7]

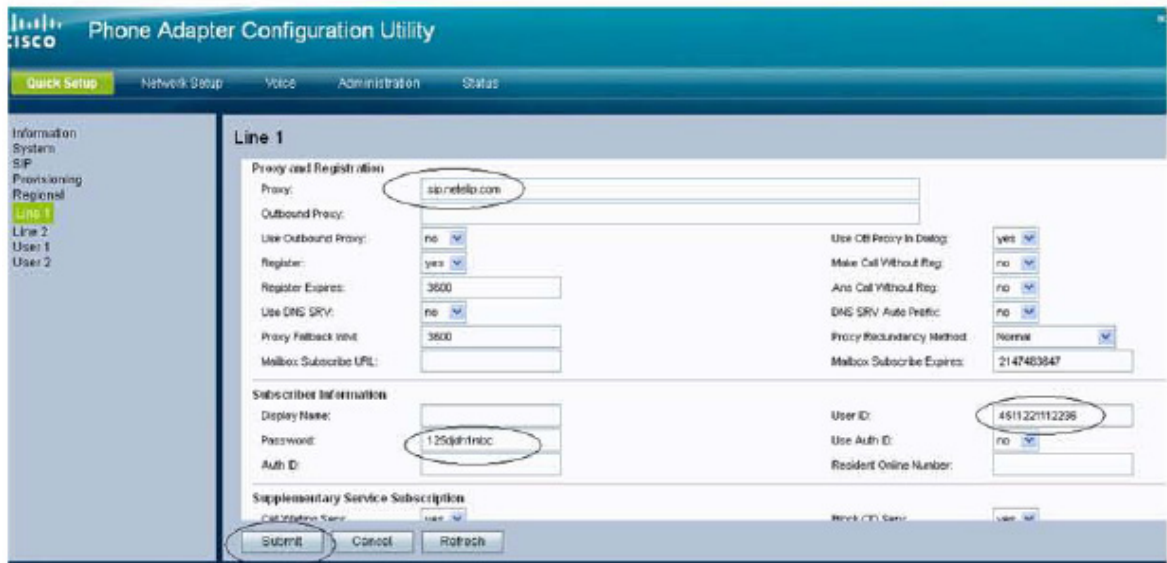

Line 1

Proxy and Registration

Proxy:

Outbound Proxy:

Use Outbound Proxy: ☐ no

Register: ☒ yes

Register Expires:

Use DNS SRV: ☐ no

Proxy Fallback Intvl:

Mailbox Subscribe URL:

Use CB Proxy in Dialog: ☒ yes

Make Call Without Reg: ☐ no

Ans Call Without Reg: ☐ no

DNS SRV Auto Prefic: ☐ no

Proxy Redundancy Method:

Mailbox Subscribe Expires:

Subscriber Information

Display Name:

Password:

Auth ID:

User ID:

Use Auth ID: ☐ no

Resident Online Number:

Supplementary Service Subscription

Call Transfer Svc: ☐ yes

Work CM Svc: ☐ yes

Your gateway adapter now is ready to start making and receiving calls using **netelip**.

Enjoy **netelip** service.